




## HANVEY TANDEM DRYERS VERSION 2



This guide will showcase how to set up the Hanvey Dryers in the updated tandem format. It is for conversions built mid-2019 through the end of calendar year 2024.

**THIS IS A CONDENSED GRAPHIC FOR INSTALLING THE DRYERS IN TANDEM.**  
Please read the accompanying article in its entirety before proceeding with the installation.

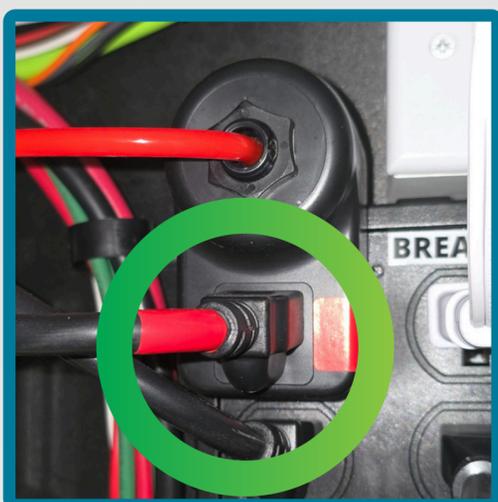

- Unplug the Fluff Dryer from the Red Switch box. Circled in **green**.
- Remove the filter from the bottom of the fluff dryer by unscrewing the **red** set screw.
- Remove the hose from the top of the Fluff Dryer by removing the **red** set screw.
- Lift the fluff dryer off the bracket and place it in the salon.
- Unscrew the bracket from the divider wall. Put the screws and wall plate with the dryer.



- Remove the entire Fluff Dryer hose, marked by the **red** arrow
- Hang the Fluff Dryer bracket with tape, mark the holes with a sharpie, remove the bracket and pre-drill before installing. Circled in **green**.\*

\*Failure to predrill the holes can result in damage to the laminate. This is not covered by the warranty.



- Split the HanV Forcer dryer hose at the coupling and attach to each end of the Fluff Dryer elbows. Circled in **green**.
- The elbows will be installed as shown in the picture. Marked by the **red** and **green** arrows.
- The On/Off switch will be on the bottom (marked by the arrow in **yellow**)
- The logo will be upside down.



At this time, confirm that the metal switch is in the "ON" positioning and the extension cord is plugged in to the Red Switch Box in the Equipment Area. Then, secure the Fluff Dryer to the bracket. Your dryers are now in tandem!