




HANVEY
ENGINEERING & DESIGN



CLEANING THE BATHING BEAUTY PART 2

Please be sure to proceed with caution.

Cleaning the second section of the Bathing Beauty can result in losing functionality.
It is *not* necessary to clean this portion on a regular basis.

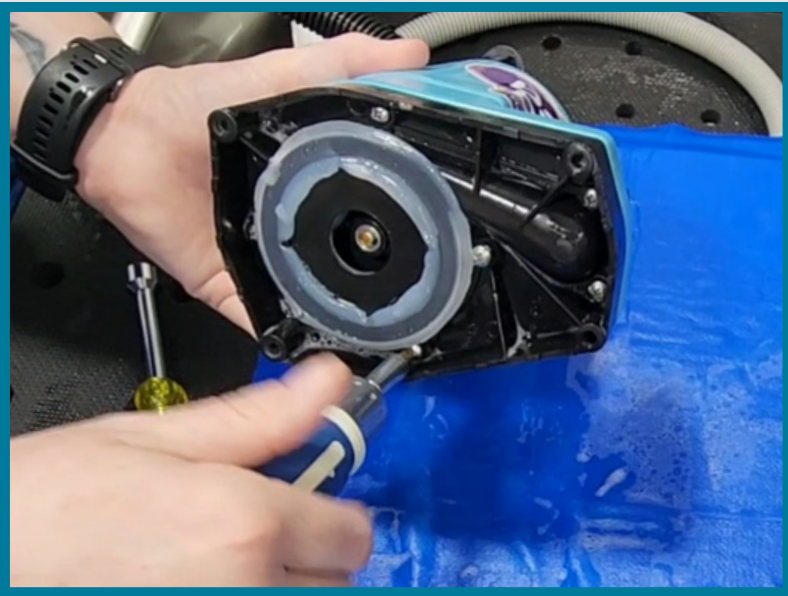

Removing the Propeller Cup:


- Loosen all of the screws by hand with a Phillips head screwdriver.
- Once the screws are loosened, remove the propeller cup and gently tap out the screws, and put them in a safe place.



The Propeller Cup:

- **There is a thin rubber seal around the edge of the propeller cup. If this seal becomes lost or damaged, it permanently degrades the unit's performance.**
- This seal can stick to the paint when removing the cup from the blue-painted bathers. Gently remove it and reseal it inside of the groove. (The black-style bathers did not have this issue).
- Do not remove the seal from the propeller cup. If a section of the seal has popped up, gently push it back into the groove.
- Spray the propeller cup with the desired disinfectant/cleaner and use the plastic brush to clean inside the cup and around the edge, using caution not to dislodge the rubber seal.
- In extreme cases, debris buildup can accumulate in the deep grooves around the bathing beauty body.

Putting it back together:

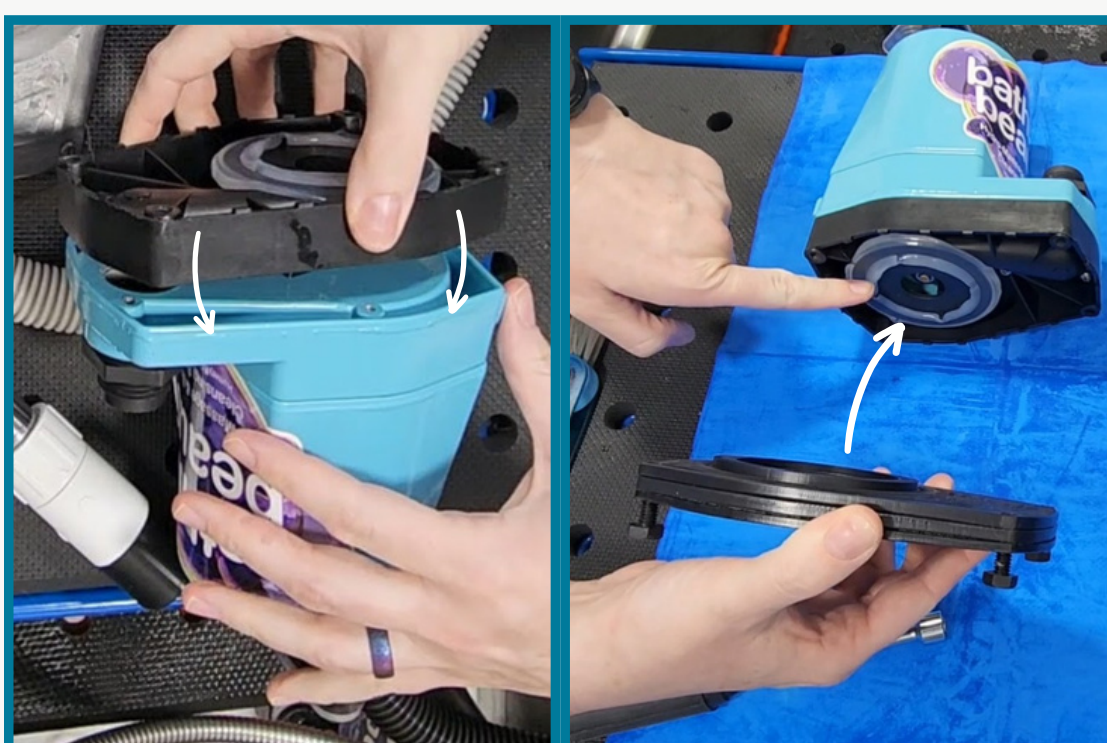

- Align the propeller cup with the bottom of the Bathing Beauty. Begin by partially screwing in each screw by hand. **DO NOT** tighten them down completely until all are correctly seated. If one of the screws gets stuck, back it out and try again.
- Align the raised edge side of the bather's bottom to the silicone seal. Screw in each "foot" partway until all are correctly seated with the Nut Driver. Then gently tighten. **DO NOT** over-tighten them, as they can break.